


SR SUNTOUR

RS21-VORO RC INCH

Date	2020.09.21	Version	0
Amended	2020.09.21		

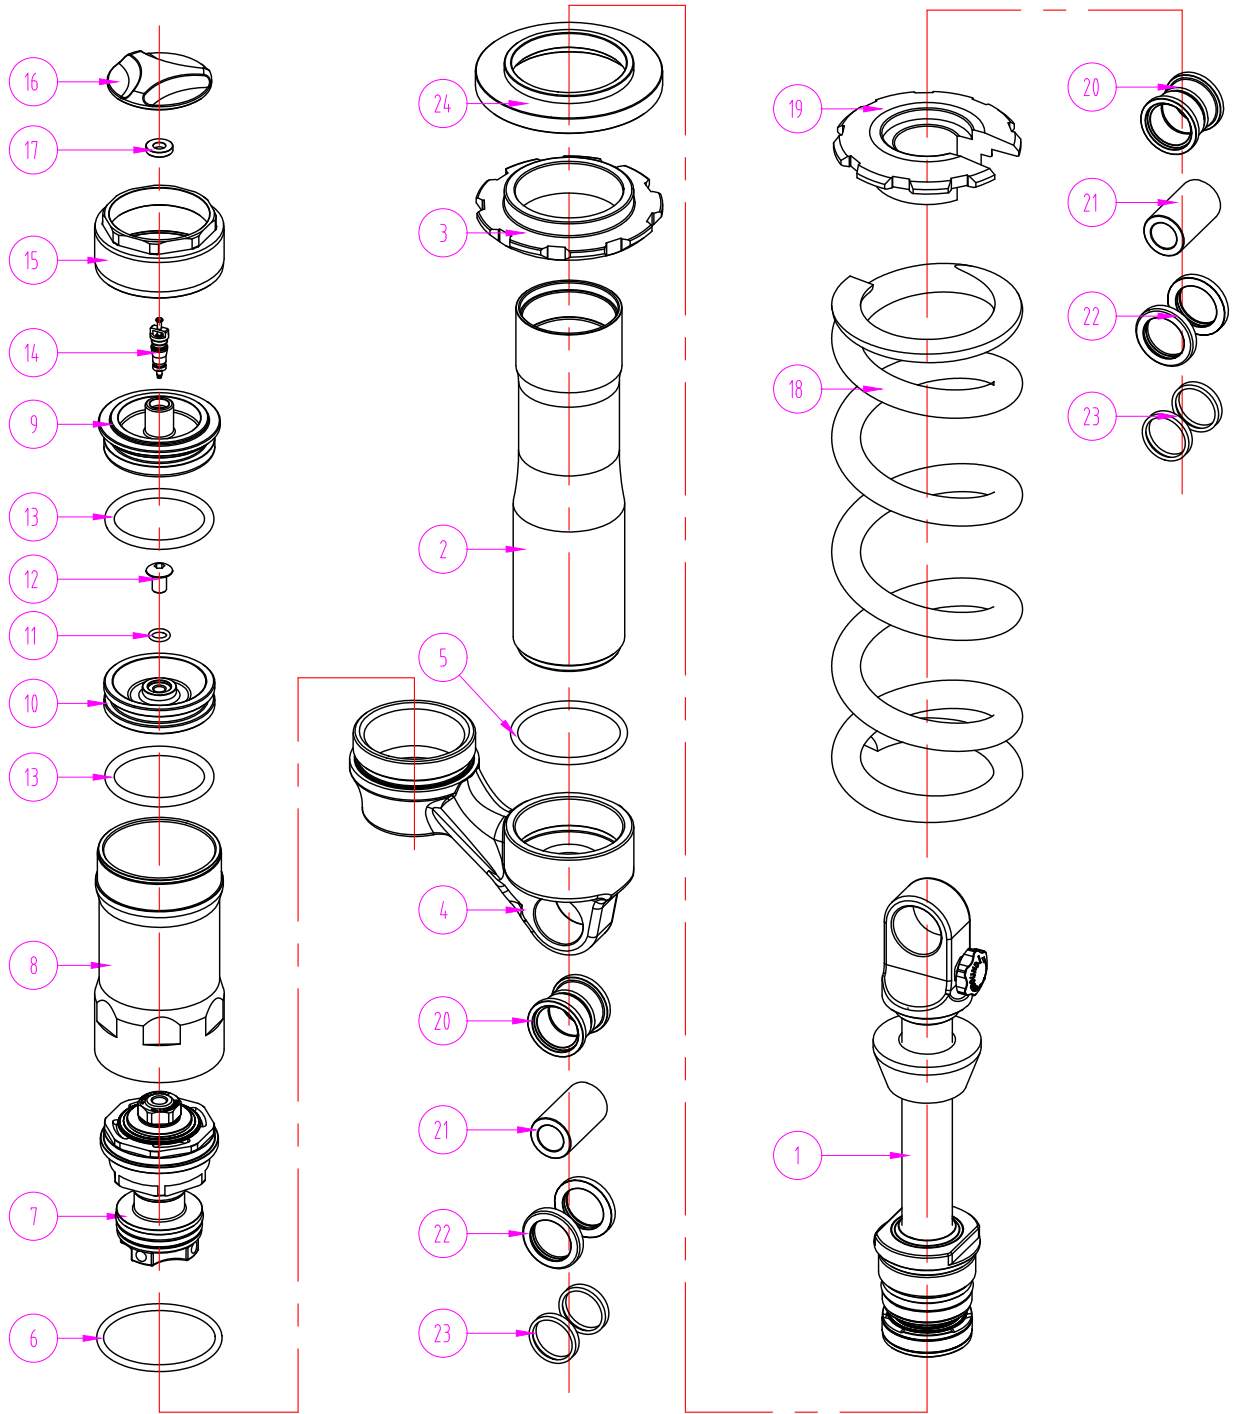

NO.	DESCRIPTION	SR CODE	MATERIAL	200 -57	216 -63	222 -70	241 -76
24	Spring Spacer	REE208-xx	ABS	1	1	1	1
23	O RING	RAA101	NBR	8	8	8	8
22	AL BUSHING	REE176 REE175 REE174	AL6061	2	2	2	2
21	SPHERE	RAA091	ABS	4	4	4	4
20	BUSHING	REE114	PLASTIC	4	4	4	4
19	Spring Clip	RAA178		1	1	1	1
18	MAIN SPRING	RES028 RES027		1	1	1	1
17	WASHER	RSW036	NBR	1	1	1	1
16	Air CAP	REE173	AL6061	1	1	1	1
15	Volume ADJ Locking	RAA087	AL6061	1	1	1	1
14	VALVE	FAA170-10		1	1	1	1
13	O RING	FAA308	NBR	2	2	2	2
12	Screw	RSB004	STEEL	1	1	1	1
11	O RING	FAA174	NBR	1	1	1	1
10	IFP 31mm	RLB065	AL6061	1	1	1	1
9	Bladder Air Cap	RAA085-10	AL6061	1	1	1	1
8	Reservoir Body	RLB169	AL6061	1	1	1	1
7	LOADER ASSEMBLY	RBA801-10		1	1	1	1
6	O RING	RAA098	NBR	1	1	1	1
5	O RING	FAA188	NBR	1	1	1	1
4	NoCom Alpha Housing	RLB067	AL6061	1	1	1	1
3	Preload Collar	RSN015	AL6061	1	1	1	1
2	MAIN BODY	RLB134-76 RLB134-70 RLB134-63 RLB134-57	AL6061				1
1	MAIN SPINDLE ASSEMBLY	RBA810-76-10 RBA810-70-10 RBA810-63-10 RBA810-57-10				1	
NO.	DESCRIPTION	SR CODE	MATERIAL	200 -57	216 -63	222 -70	241 -76